




Samsung Galaxy Tab E Lite 7 Kids Speaker Replacement

This replacement guide will show you how to replace the speaker in your Samsung Galaxy Tab E Lite 7 Kids.

Written By: Nicholas Nolan

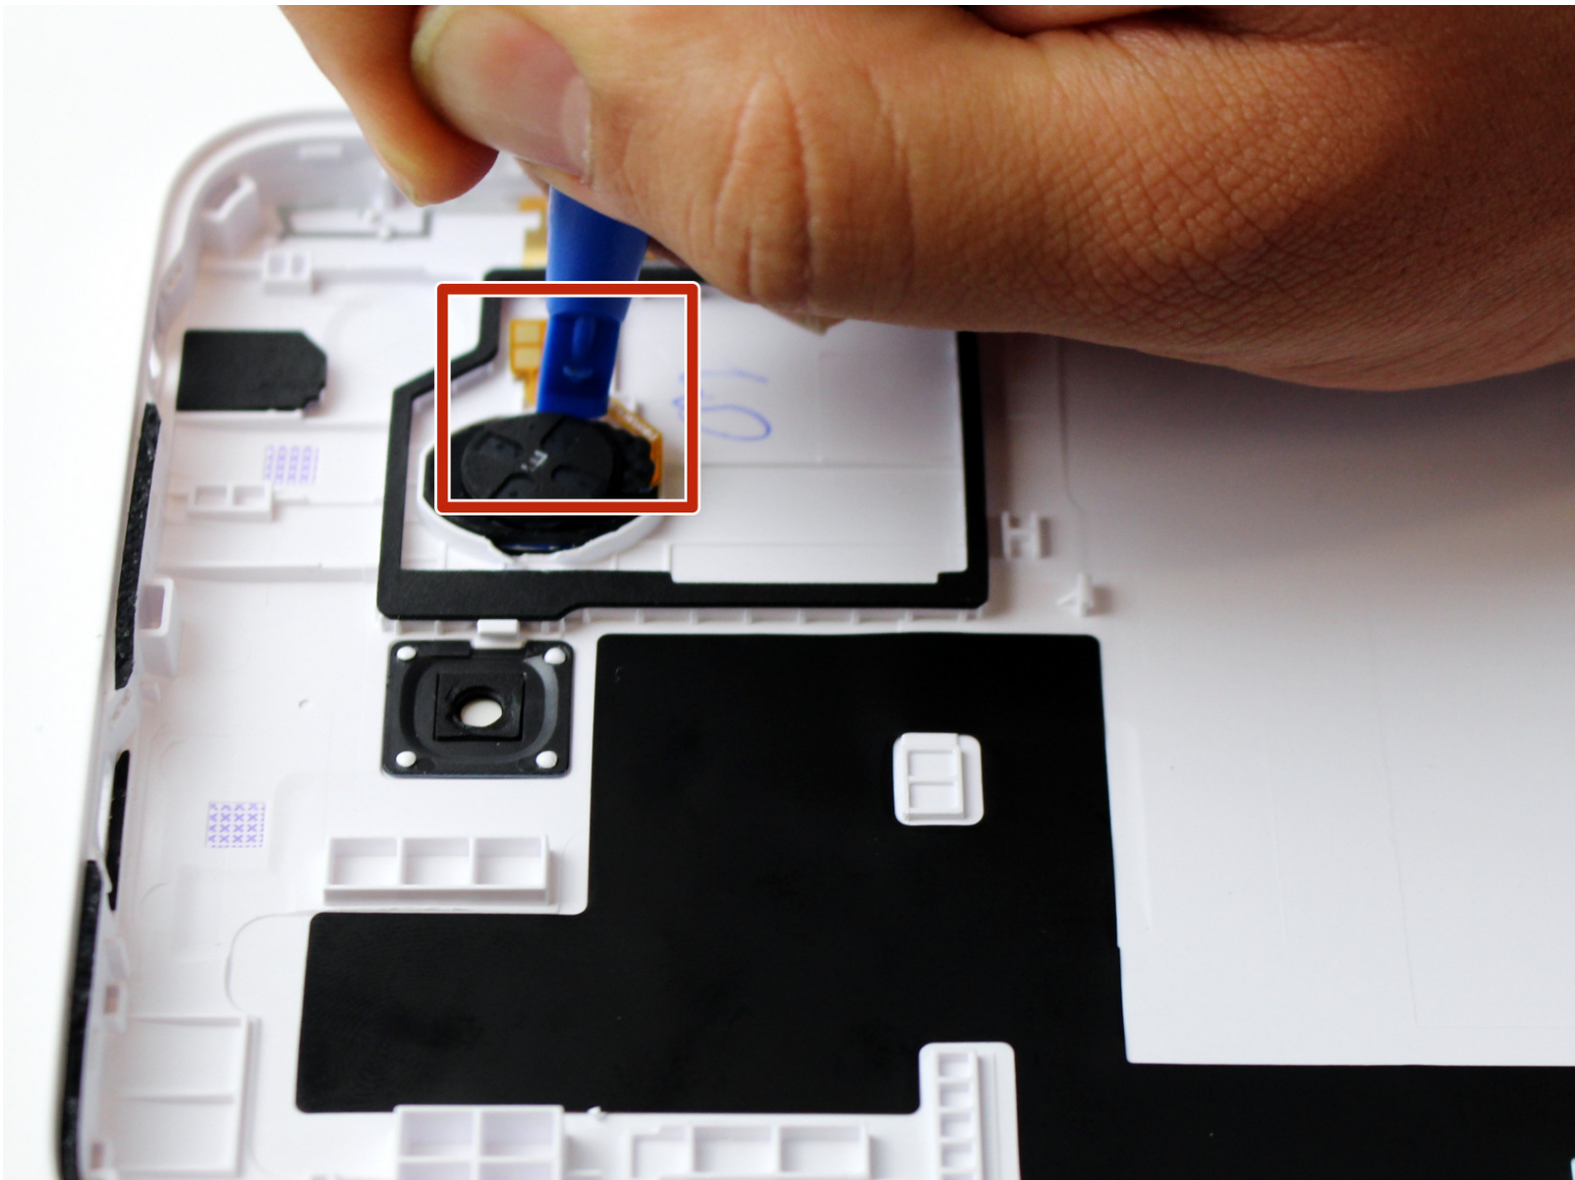

INTRODUCTION

This replacement guide will show you how to replace the speaker in your Samsung Galaxy Tab E Lite 7 Kids. You will need to follow the instructions carefully as to not damage any fragile components in your tablet.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Rear Case



 Make sure the device is turned off before attempting to disassemble it.


- Using a plastic opening tool, wedge in the seam between the screen and the case.
- Rock the tool by moving it towards and away from the middle of the screen, trying to separate the tape holding the screen and case together.

Step 2

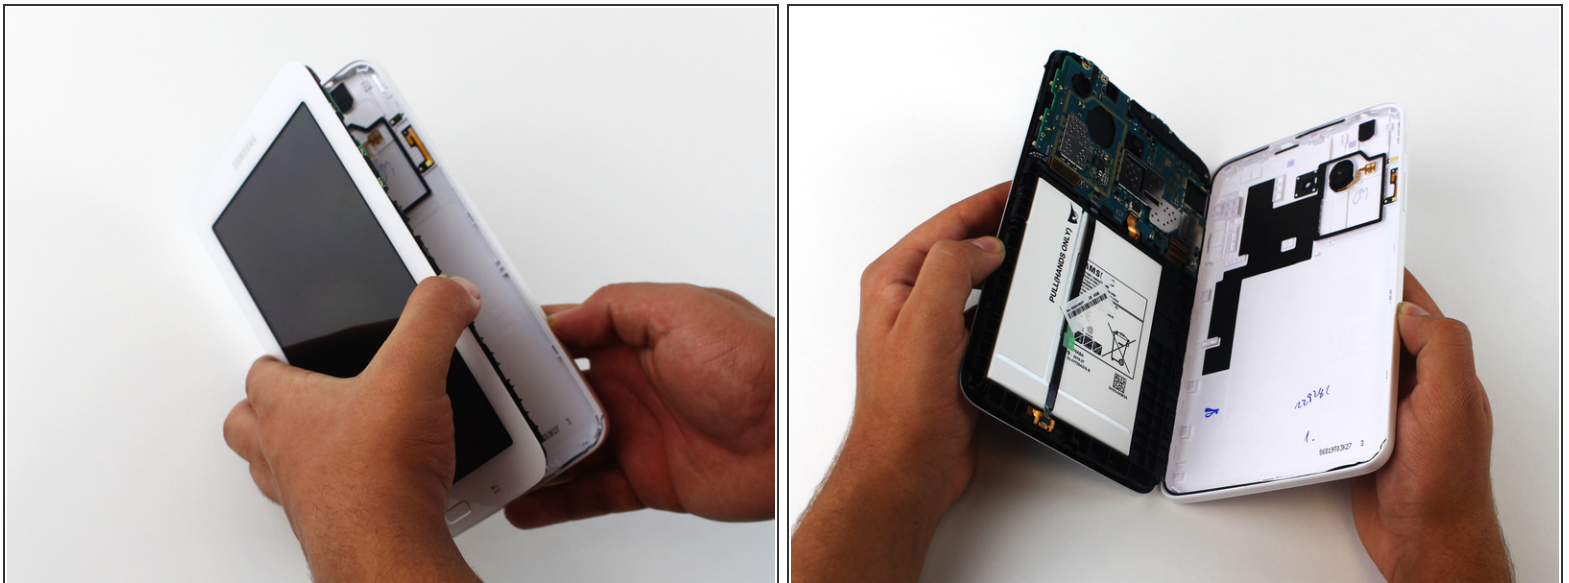




- After separating the latches holding the screen and case together, slowly take the screen off the case.

Step 3 — Speaker

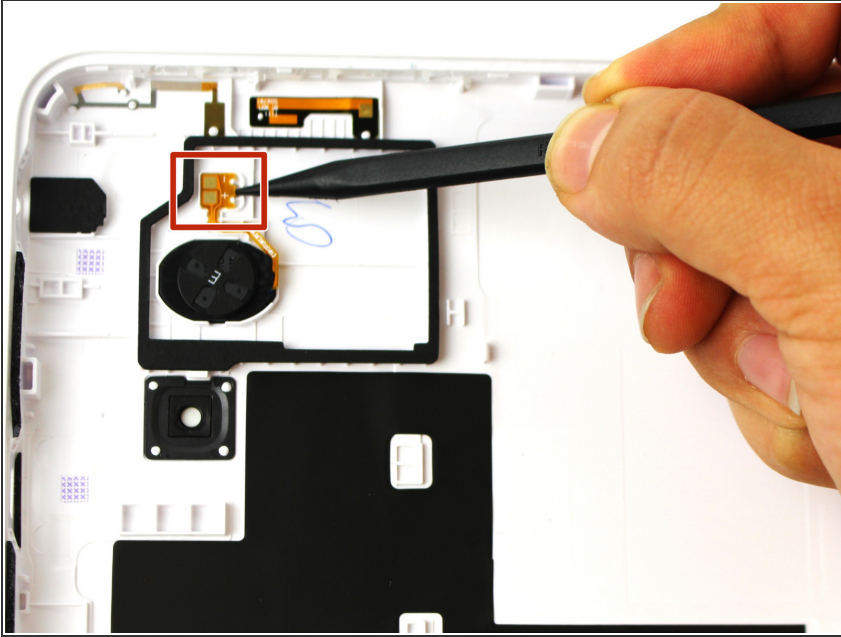

- Using a spudger, pry up the speaker ribbon cable.

Step 4

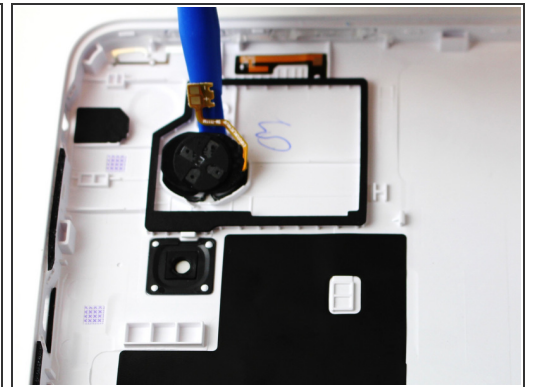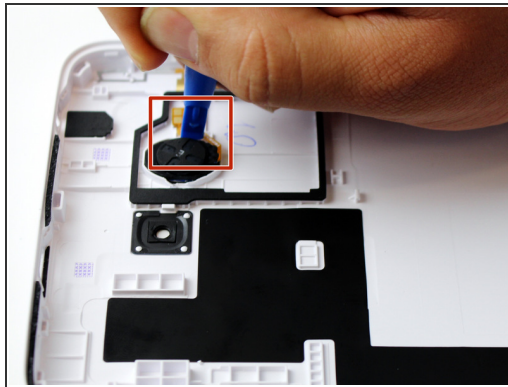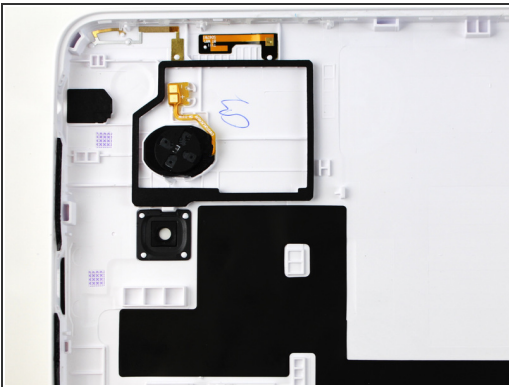

- Using the plastic opening tool, place it on the opening in the plastic around the speaker.
- Pry the speaker out of its seat.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 05:31:44 PM.